

<b>A Humidity transmitters testo 6621, testo 6651, testo 6681</b>	<b>6</b>
<b>A1 Overview measurement transmitter versions and applications testo 6621, testo 6651, testo 6681</b>	<b>6</b>
<b>A2 Air conditioning humidity transmitter testo 6621</b>	<b>9</b>
1 Description	9
2 Application	9
3 Technical data	10
4 Electrical connection	11
4.1 Wiring	11
4.1.1 Wiring 4-wire	11
4.1.2 Wiring 2-wire	11
4.1.3 Wiring 3-wire technology	11
5 Technical drawings	12
5.1 Installation A01 wall version	12
5.2 Installation A02 duct version	13
5.3 Installation A03 wall version	14
6 Installation	15
6.1 Installation A01 wall version	15
6.2 Installation A02 duct version	15
6.3 Humidity sensor exchange	17
7 Specifications	17
<b>A3 Stable ambient conditions in greenhouses testo 6631</b>	<b>18</b>
1 Description	18
2 Electrical connections	18
3 Technical drawings	19
<b>A4 Humidity transmitter testo 6651</b>	<b>20</b>
1 Description	20
2 Exchangeable probes, probe series testo 6600	20
2.1 Description of probe series	20
3 Technical data	21
3.1 testo 6651	21
3.2 Probe series testo 6600	22
<b>A5 Humidity transmitter testo 6681</b>	<b>23</b>
1 Description	23
2 Exchangeable probes, probe series testo 6610	23
2.1 Description of probe series	23
3 Technical data	24
3.1 testo 6681	24
3.2 Probe series testo 6610	25
<b>A6 General information on the transmitters testo 6651 and testo 6681</b>	<b>26</b>
1 Operating menu	27
2 Self-monitoring / Status: generated reports	28
3 Wiring / electrical connection	29
4 Technical drawings	32
5 Installation	33
5.1 Wall version	33
5.2 Duct version	33
6 Specifications	34
6.1 testo 6651 and probe series testo 6600	34
6.2 testo 6681 and probe series testo 6610	35

<b>B General information on all Testo humidity transmitters</b>	<b>36</b>
<b>1 P2A software for parameterization, analysis and adjustment (testo 6621, testo 6651 and testo 6681)</b>	<b>36</b>
1.1 Overview P2A software	36
1.2 Operation	36
1.3 Operating menu (in the P2A software)	37
1.4 Carrying out adjustments via the P2A software	38
<b>2 Filters / protective caps</b>	<b>39</b>
<b>3 Condensation protection</b>	<b>40</b>
<b>4 Adjustment/calibration and calibration certificates</b>	<b>41</b>
4.1 Adjustment / calibration for testo 6621, testo 6651 and testo 6681	41
4.1.1 1-point adjustment	42
4.1.2 2- point adjustment	42
4.2 Calibration certificates	43
4.2.1 Certificates	43
4.2.2 Temperature calibration certificates	44
4.2.3 Humidity calibrations	44
<b>5 Sensor</b>	<b>45</b>
5.1 Capacitive Testo humidity sensor	45
5.2 Functionality of the 650 HP and testo 6681 with probe testo 6614 (heated sensor for high humidity applications)	46
5.3 Temperature sensor (NTC = Negative Temperature Coefficient)	47
5.4 Temperature sensor (Pt 1000 Class A9)	47
<b>6 Physical principles</b>	<b>47</b>
6.1 Water vapour partial pressure	47
6.2 Saturated vapour pressure	49
6.3 Relative humidity	50
6.4 Dewpoint temperature	50
6.5 Absolute humidity [g/m <sup>3</sup> ]	50
6.6 Degree of humidity X or mix ratio	50
6.7 Wet bulb temperature	50
6.8 Psychrometric chart for air conditioning applications	51
6.9 Temperature and pressure-dependency of humidity parameters	52
<b>C Differential pressure transmitter</b>	<b>54</b>
<b>C1 Overview of versions and applications</b>	<b>54</b>
<b>C2 Differential pressure transmitter in cleanroom-conform panel design testo 6388 (10 Pa to 10 hPa)</b>	<b>56</b>
1 Description	56
2 Technical data	57
3 Connection plan	58
4 Technical drawings	58
<b>C3 Differential pressure transmitter with temperature / humidity option testo 6381 (10 Pa to 1000 hPa)</b>	<b>60</b>
1 Description	60
2 Technical data	61
3 General technical data / Connection plan	62
4 Technical drawings	62
<b>C4 Differential pressure transmitter with high long-term stability and accuracy testo 6351 (50 Pa to 2000 hPa)</b>	<b>64</b>
1 Description	64
2 Technical data	65
3 Connection plan	66
4 Technical drawings	66
<b>C5 Differential pressure transmitter for building climate testo 6321 (100 Pa to 2000 hPa)</b>	<b>68</b>
1 Description	68
2 Technical data	69
<b>C6 Differential pressure transmitter testo 6340 (freely selectable between - 1000 to +1000 mbar)</b>	<b>70</b>
1 Description	70
1.1 Design of the inductive differential pressure sensor	70
1.2 Overload capacity of testo 6341 and testo 6343	70
2 Application cleanroom security	71
3 Ordering options	72

## Contents

<b>4</b>	<b>Technical data</b>	<b>73</b>
<b>5</b>	<b>Electrical connection</b>	<b>74</b>
<b>6</b>	<b>Technical drawings</b>	<b>76</b>
6.1	testo 6341/6343	76
6.2	testo 6342/6344	77
<b>7</b>	<b>Specifications</b>	<b>78</b>
7.1	Specifications testo 6341/6343	78
7.2	Specifications testo 6342/6344	79
<b>8</b>	<b>Adjustment of zero-point / Calibration certificates</b>	<b>80</b>
8.1	Automatic zero-point adjustment in testo 6341/6343	80
8.2	Manual zero-point adjustment in testo 6342/6344	81
8.3	Calibration certificates	82
<b>9</b>	<b>Physical principles</b>	<b>83</b>
9.1	Definition of pressure	83
9.2	Overview of pressures	83
9.3	Atmospheric air pressure ( $P_{atm}$ )	84
9.4	Absolute pressure ( $P_{abs}$ )	84
9.5	Differential pressure ( $\Delta P$ )	84
9.6	Relative pressure ( $P_{rel}$ )	84
9.7	Signal delay/damping	85
<b>D Temperature transmitter</b>		<b>86</b>
<b>1</b>	<b>Description</b>	<b>86</b>
<b>2</b>	<b>Technical data</b>	<b>87</b>
<b>3</b>	<b>Connection plan</b>	<b>88</b>
<b>4</b>	<b>Technical drawings</b>	<b>88</b>
<b>E Temperature probes and output instruments</b>		<b>90</b>
<b>1</b>	<b>Selection of probe components and output instruments</b>	<b>90</b>
<b>2</b>	<b>Overview standard probes</b>	<b>92</b>
<b>3</b>	<b>Customized temperature probes</b>	<b>94</b>
<b>4</b>	<b>Standard probe Type 02/03/04/06/08</b>	<b>95</b>
<b>5</b>	<b>Standard probe Type 09/10/11/12/13</b>	<b>96</b>
<b>6</b>	<b>Standard probe Type 14/15/17/18</b>	<b>97</b>
<b>7</b>	<b>Standard probe Type 19/20/21/23/24</b>	<b>98</b>
<b>8</b>	<b>Cables</b>	<b>99</b>
<b>9</b>	<b>Plug and screw connections</b>	<b>100</b>
<b>10</b>	<b>Signal output with the temperature transmitter testo 55</b>	<b>101</b>
<b>11</b>	<b>Selection assistance temperature probes and overview</b>	<b>102</b>
<b>12</b>	<b>Request customized temperature probes</b>	<b>106</b>
<b>13</b>	<b>Internal/external cold junction compensation in thermocouples</b>	<b>108</b>
<b>14</b>	<b>Psychrometric chart for air conditioning applications</b>	<b>111</b>
<b>15</b>	<b>Norm tables</b>	<b>112</b>
<b>F testo 54 Process displays / external displays</b>		<b>114</b>
<b>1</b>	<b>Description</b>	<b>114</b>
<b>2</b>	<b>Ordering options</b>	<b>114</b>
<b>3</b>	<b>Temperature process displays (external displays) testo 54-1 with min./max. value store and auxiliary energy output</b>	<b>115</b>
3.1	Electrical connection for testo 54-1	115

## Contents

<b>4</b>	<b>testo 54-2/-3 with relay outputs</b>	<b>116</b>
4.1	Electrical connections for testo 54-2/-3	116
<b>5</b>	<b>Process displays (external displays) testo 54-4/-5/-6 with in/max value store</b>	<b>118</b>
5.1	Electrical connections for testo 54-4/-5/-6	118
<b>6</b>	<b>Temperature/analog value process displays (external displays) testo 54-7/-8 with relay outputs and RS485 output and min./max. value store</b>	<b>119</b>
6.1	Electrical connections for testo 54-7/-8	119
<b>7</b>	<b>Accessories for process display testo 54</b>	<b>120</b>
<b>8</b>	<b>Technical drawings</b>	<b>120</b>
8.1	Technical drawing testo 54-4/-5/-6	120
8.2	Technical drawing testo 54-1	121
8.3	Technical drawing testo 54-2/-3/-7/-8	122
8.4	Technical drawings wall housing	123
8.5	Technical drawings alarm column	124
<b>9</b>	<b>Process display 54 - the basics</b>	<b>125</b>
9.1	Limit value settings	125
9.1.1	Difference between relay output and switch output	125
9.1.2	Relay outputs can be set as opener or closer	125
9.1.3	Limit value settings (AUTO or LATCH signal) in testo 54-2/-3/-7/-8	126
9.2	The LATCH signal in testo 54-1/-4/-5/-6	127
9.3	Keylock "Key" in testo 54-2/-3/-7/-8	127
9.4	Using the auxiliary energy output	127
9.5	MIN./MAX. value store	128
9.6	Totaliser	128
9.6.1	Totaliser function	128
<b>G Information relevant for all measurement transmitters</b>		<b>129</b>
<b>1</b>	<b>Avoiding errors in wiring</b>	<b>129</b>
1.1	2-wire technology (4 to 20 mA)	129
1.2	4-wire technology (0 to 20 mA, 4 to 20 mA, 0 to 1 V, 0 to 10 V)	130
1.3	Wiring guide	131
<b>2</b>	<b>Selection assistance for voltage supply</b>	<b>133</b>
2.1	Description of the voltage supply possibilities	133
2.2	Dimensional drawing of voltage supplies	134
2.2.1	Desktop mains unit (0554.1748)	134
2.2.2	Top hat rail mains unit (0554.1749)	135
<b>3</b>	<b>Calibration and adjustment</b>	<b>136</b>
<b>4</b>	<b>Influence of the measurement inaccuracy of the reference instrument</b>	<b>136</b>
<b>5</b>	<b>Scaling and resolution</b>	<b>137</b>
<b>6</b>	<b>Housing protection according to IP (International Protection)</b>	<b>138</b>
6.1	Tightness according to IP-norm	138
6.2	Watertightness test at Testo (based on DIN VDE 0470-1/ EN 60529 / ICE 529)	139